

SURFACE PROTECTION

These products have SPARCLEAN[®] surface treatment for protection against soiling and staining by eliminating dirt traps.

These products have deeply inlaid mineral crystal particles in the wearlayer acting as a slip resistant agent. They should not be sealed under any circumstances, unless the slip resistance is considered not important.

INITIAL MAINTENANCE

Remove loose dirt and debris from the newly installed floor using vacuum and/or scissor mop. Ensure all adhesive residues are removed with due regard to supplier's recommendations. Do not use high abrasive pads or scourers.

Wash floor with a low speed cleaning machine fitted with a blue, green or brown pad, according to dirt level on the floor. Ensure all detergent residues are rinsed and removed from the floor.

DAILY MAINTENANCE

Remove dirt with broom or vacuum; damp mop with neutral detergent.

PERIODIC MAINTENANCE

Machine autoscrub with nylon brush as required, or wash floor and buff with red pad at about 450rpm.

For further enquiries regarding the maintenance of Gerflor products, please contact your Gerflor Technical Manager.

