



Maintenance Instructions

Nexus - Stainless Steel Entrance System

General Maintenance

All stainless steel grilles can be dust cleaned by using a vacuum or surface wiped with a duster when necessary. For most installations it is recommended that cleaning is carried out once per week. Trapped soil and moisture should be removed from the well by removing the grilles as required, or with a blower or vacuum.

Stains

Stains left by spillages can be cleaned by using warm water.

Old or stubborn stains can be removed by using a stainless steel metal cleaner and polish. **DO NOT** spray stainless steel cleaner directly onto the stainless steel as it could damage the rubber base layer. Always apply with a clean cloth or duster pad. Any surface contamination can be removed by hand but the direction of the strokes must always be in line with the wires and apertures and not across.

Recommended

Over a period of time exposure to the elements can introduce a surface layer of grime and airborne deposits which can adhere to the outer grille surface. This layer can be removed with warm water or a non-abrasive emulsion cleaner.

DO NOT USE

Any other metal cleaners, brass, copper etc.

Any products that contains abrasives or acids, which could scratch, damage or corrode stainless steel. **Only use stainless steel cleaner or water.**

Working Within Vicinity of Nexus Grilles

All stainless steel grilles supplied by Advance Flooring are manufactured in controlled areas to ensure there is no cross contamination from other materials (e.g. mild steel). Should there be any work carried out on site or other works in close proximity to the sheets, it must be ensured that there is no welding or grinding or other processes that might allow contaminants to come into contact with the sheets. Similarly regarding any cleaning of adjacent areas near to the grilles should be ensured that no materials that contain absavies or acids, which could corrode, damage or scratch stainless steel should be used e.g. Brick Acid, ... Doing so may result in corrosion spots on the sheets.



Maintenance Instructions

Nexus - Stainless Steel Entrance System

Repair or Replacement

In the eventuality that a sheet requires repair or replacement, the grill must be identified by Advance Flooring's sheet number. Please inform Advance Flooring to carry out the repair or supply a replacement.

Supports

The supports should be periodically checked for integrity, ensuring they are firmly located and secure.

Maintenance, Access, Health and Safety

Removing Grilles

If the grilles must be removed, they must be reinstalled in exactly the same order and sequence. Each screen is numbered on the joining tabs. Take care to ensure joining clips engage correctly.

Removable Access Area

Please note that this product exhibits sharp edges by its nature and adequate protection must be used when handling these panels. During maintenance work or if any of the panels are removed then additional care and precautions must be taken with adequate risk assessments being carried out in line with statutory legislation to prevent the injury to maintenance operators or other people due to any unguarded opening. Any maintenance or access requiring the removal of individual or multiple panels is to be carried out in accordance with the requirements of the Health and Safety along with any applicable regulations or approved codes of practice applicable. Nexus grilles must be protected from pallet trucks, maintenance equipment and vehicles with a load weight of more than 200kg per wheel

OSH Regulations

We do not consider the product supplied poses a significant risk to health and safety as described in the regulations. Should it be necessary to modify the panels please contact Advance Flooring before doing so. If the sheets are removed for cleaning, access or modification always ensure that the sheets are securely fixed into position to ensure the sheets are not protruding from intended position. All areas must be securely guarded where sheets have been removed to prevent any accidents and warning notices posted. We cannot be held responsible for misuse, un-authorized alterations, omissions, or acts of negligence by the end user.



Maintenance Instructions

Nexus - Stainless Steel Entrance System

Cleaning the rubber base layer

Periodically the rubber base layer will need cleaning. Remove the Nexus grilles in order, take care to avoid damage. Vacuum loose dust. Scrub the base layer with water and a neutral floor cleaner. Remove excess moisture with a dry mop or wet and dry vacuum.